


Heavy Glass Frameless Series

Shower Enclosures Models - HGSE

Tub Enclosures Model - HGTE

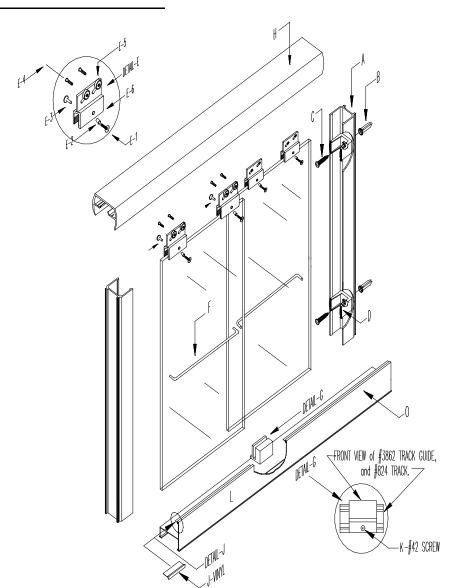

GLAZED INCLUDES GLASS

KD DOES NOT INCLUDE GLASS

WHEN ORDERING REPLACEMENT PARTS, REFER TO PART # DESCRIPTION & MODEL

KEY	PART	PART LIST	QUAN.
LETTER	#	DESCRIPTION	
A B C D E1 E2 E3 E5 E6 F G H J K L	605 64 43 69 3844 3861 3823 3822 3862 3801 190 42 824	Wall Jamb Wall Anchor Installation Screw 8x1 PH Pan SMS Bumper Glass Bracket Screw Jacket Glass Bracket Bushing Glass Bracket Screw 8-32 x 3/8 Slot Roller screw #8-32x3/8" P.H. Truss Heavy Glass Roller Glass Bracket Towel Bar Track Guide Header Track Vinyl Track Screw Track	2 4 4 4 4 4 8 8 4 2 1 1 1 1




Heavy Glass Frameless Series

Shower Enclosures Models - HGSE

Tub Enclosures Model - HGTE

BEWARE

- 1. When measuring look out for towel bars, electric switches, paper holders, tile obstruction, etc.
- 2. All measurments to be taken facing the enclosure while standing in the bathroom.
- 3. Give accurate measurements between all arrows.

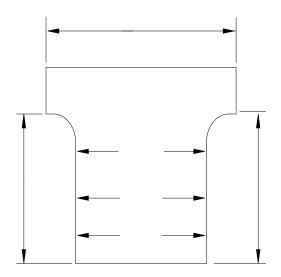

Installation Instructions

- (1) Measure bottom of opening, deduct 1/4" then cut bottom track to size.
- (2) Locate mid-point of track in channel provided, drill 1/8" hole at mid point.
- (3) Apply a bead of caulk to bottom of track and set in place.
- (4) Put one wall jamb in place and mark holes on wall, remove jamb, using a 3/16" mansonary bit drill holes in wall. Insert one plastic wall anchor in each hole. Thread a #8x1" installation screw through bumper provided and secure jamb to wall using this assembly. Repeat procedure with other jamb.
- (5) Measure width of opening (wall to wall) above the jambs. Cut header to this size minus 1/8".
- (6) Install header on jambs.
- (7) Install rollers on glass clips using #8-32x1/4" screws.
- (8) Hang panels on header.
- (9) Using #6x3/8" screw attach track guide to track using hole previously drilled.
- (10) Install towel bar on outside panel.